


How to Install Standoff Mounts for Metal Prints

Included:
Metal print
Metal standoffs
Screws
Drywall anchors


Suggested:
Cordless Drill
1/4" Drill bit
Philips screw bit
Pencil
Masking tape or painters tape
Level

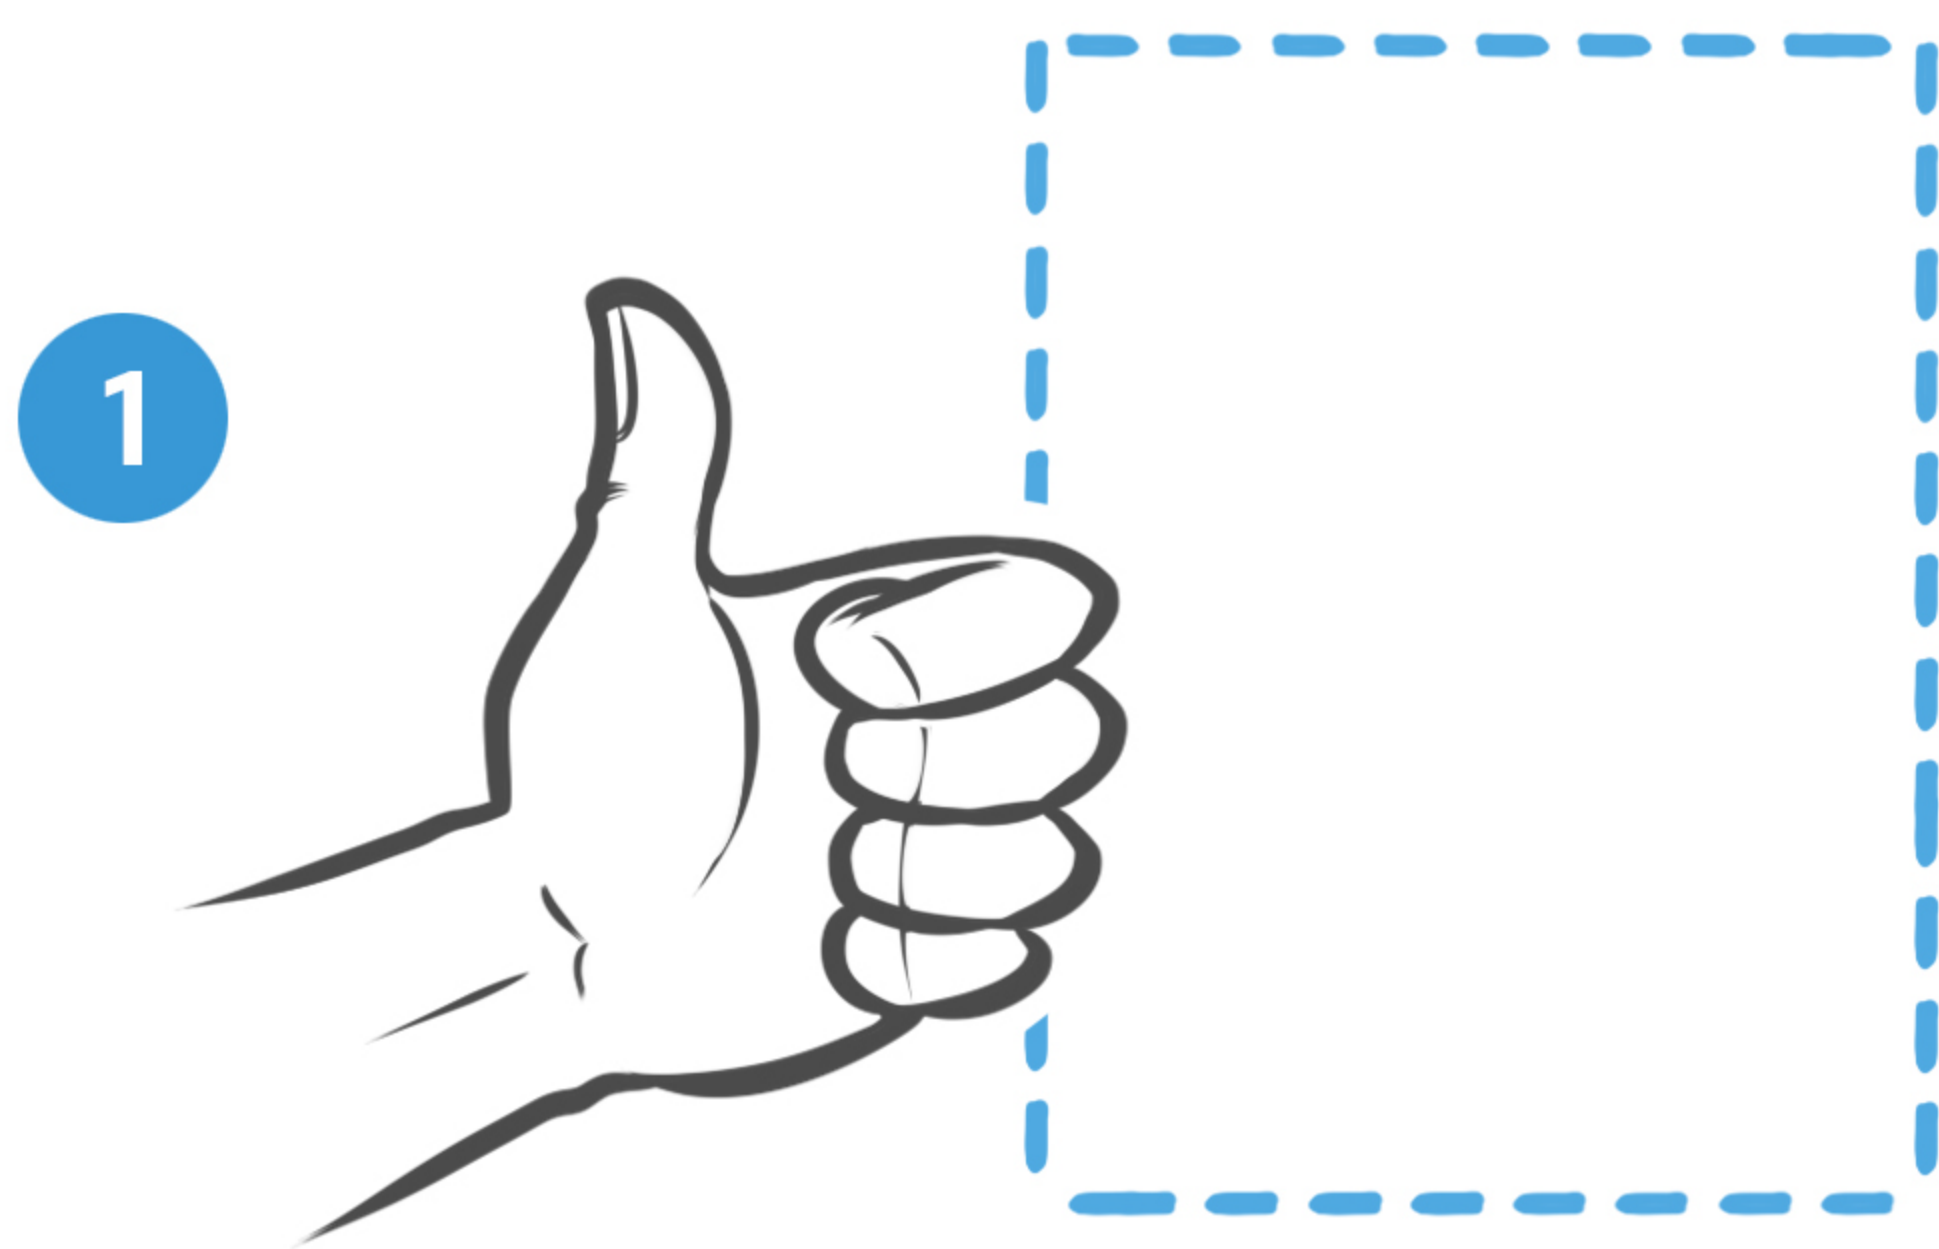

1
Locate the space on the wall where you will be installing the metal print.




2
Use the level and masking / painters tape to position the bottom edge of the print to the wall. Doing this will prevent it from being crooked after installation. Adhere the masking / painters tape on the wall as level as you can. Use the level to confirm that it is straight. The bubble should be in the middle.

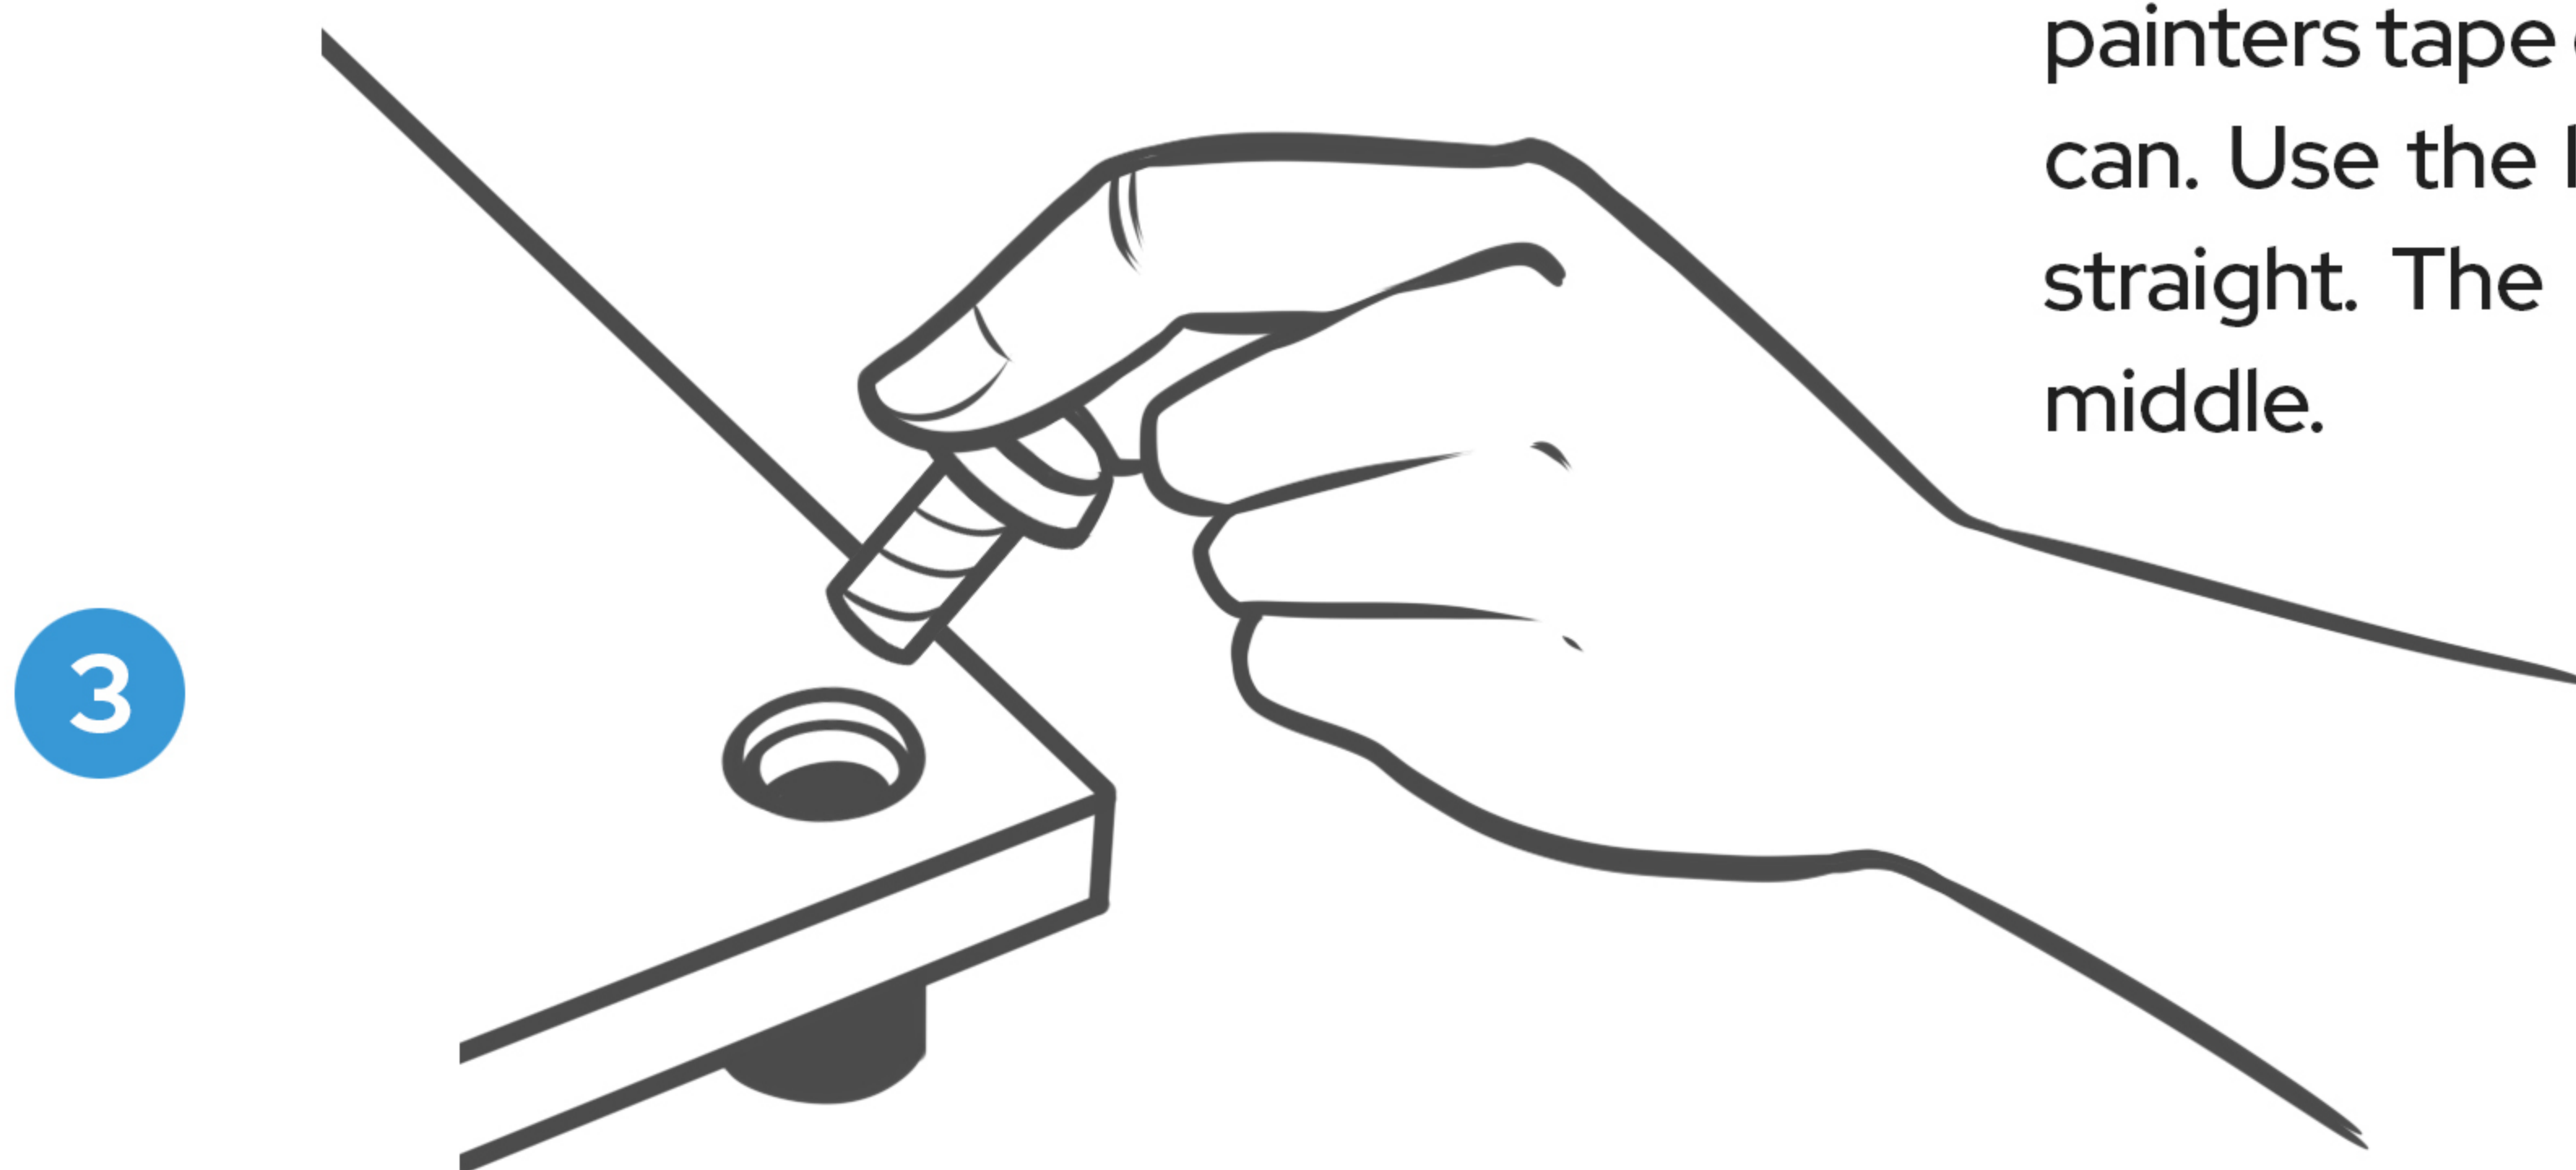


3
If the standoffs are screwed into the metal print already, unscrew them to remove.

4

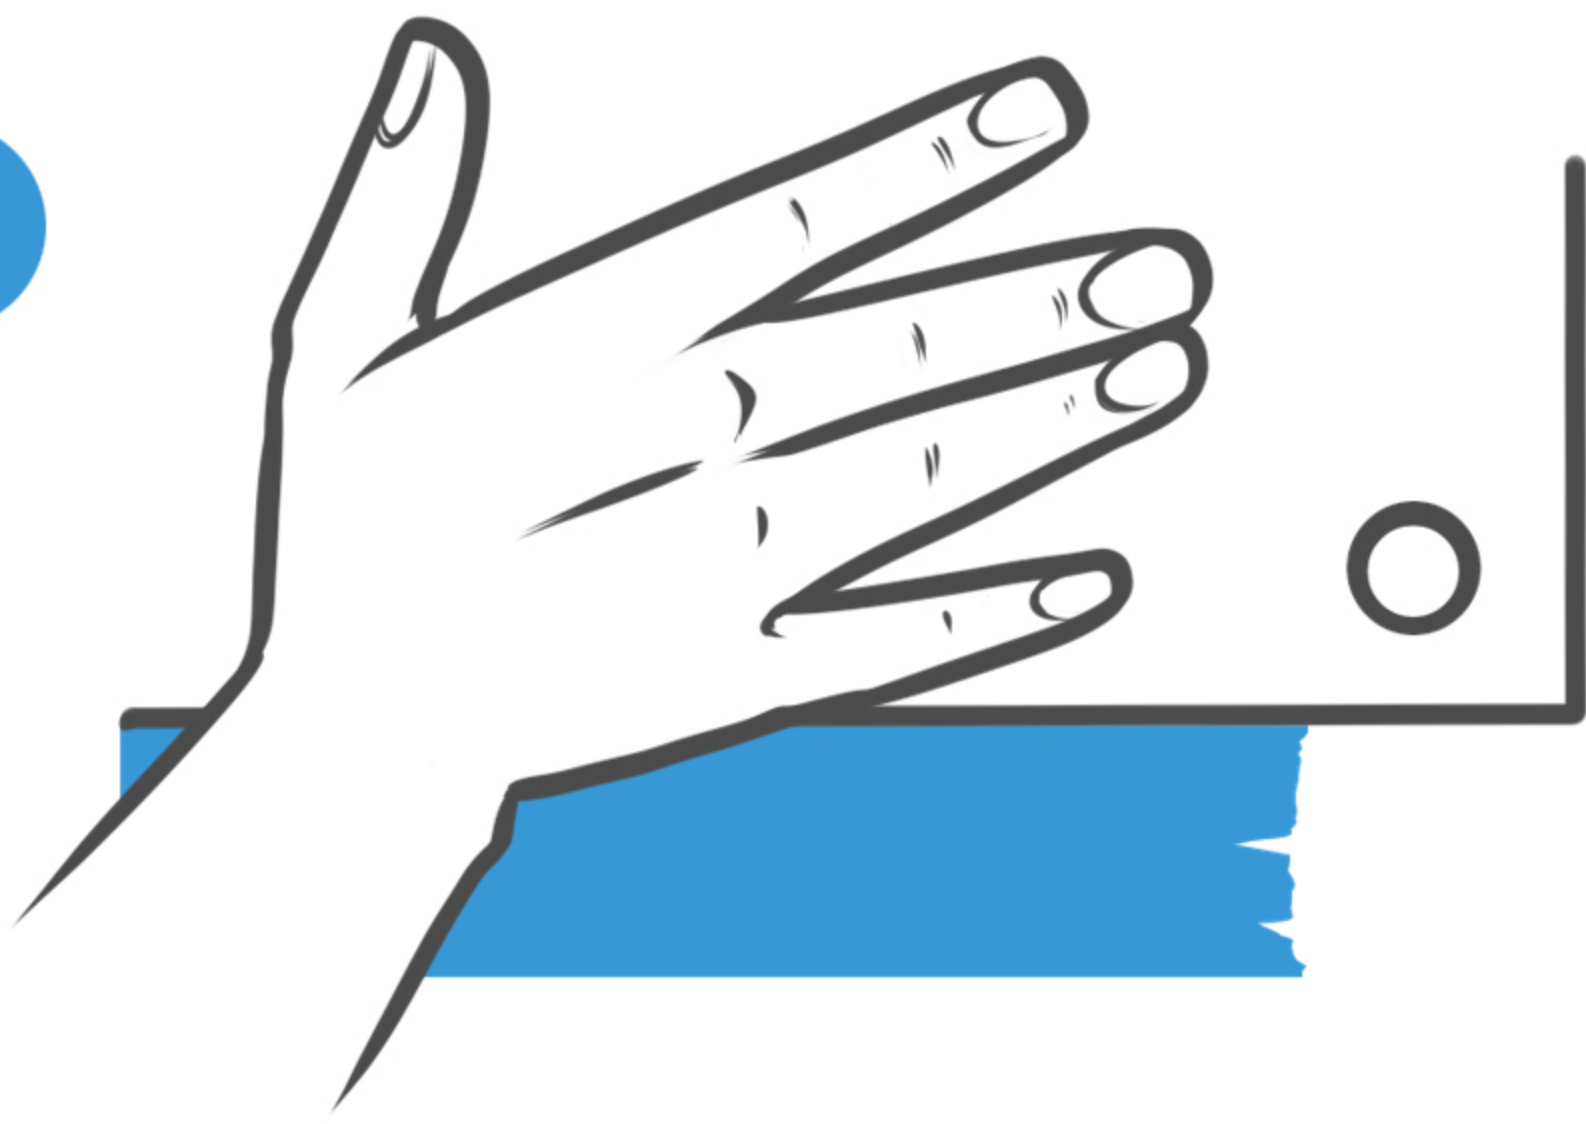


Take the metal print and gently hold it against the wall. Be careful not to scratch the surface of the print. Line it up against the tape to make sure it is leveled.

5

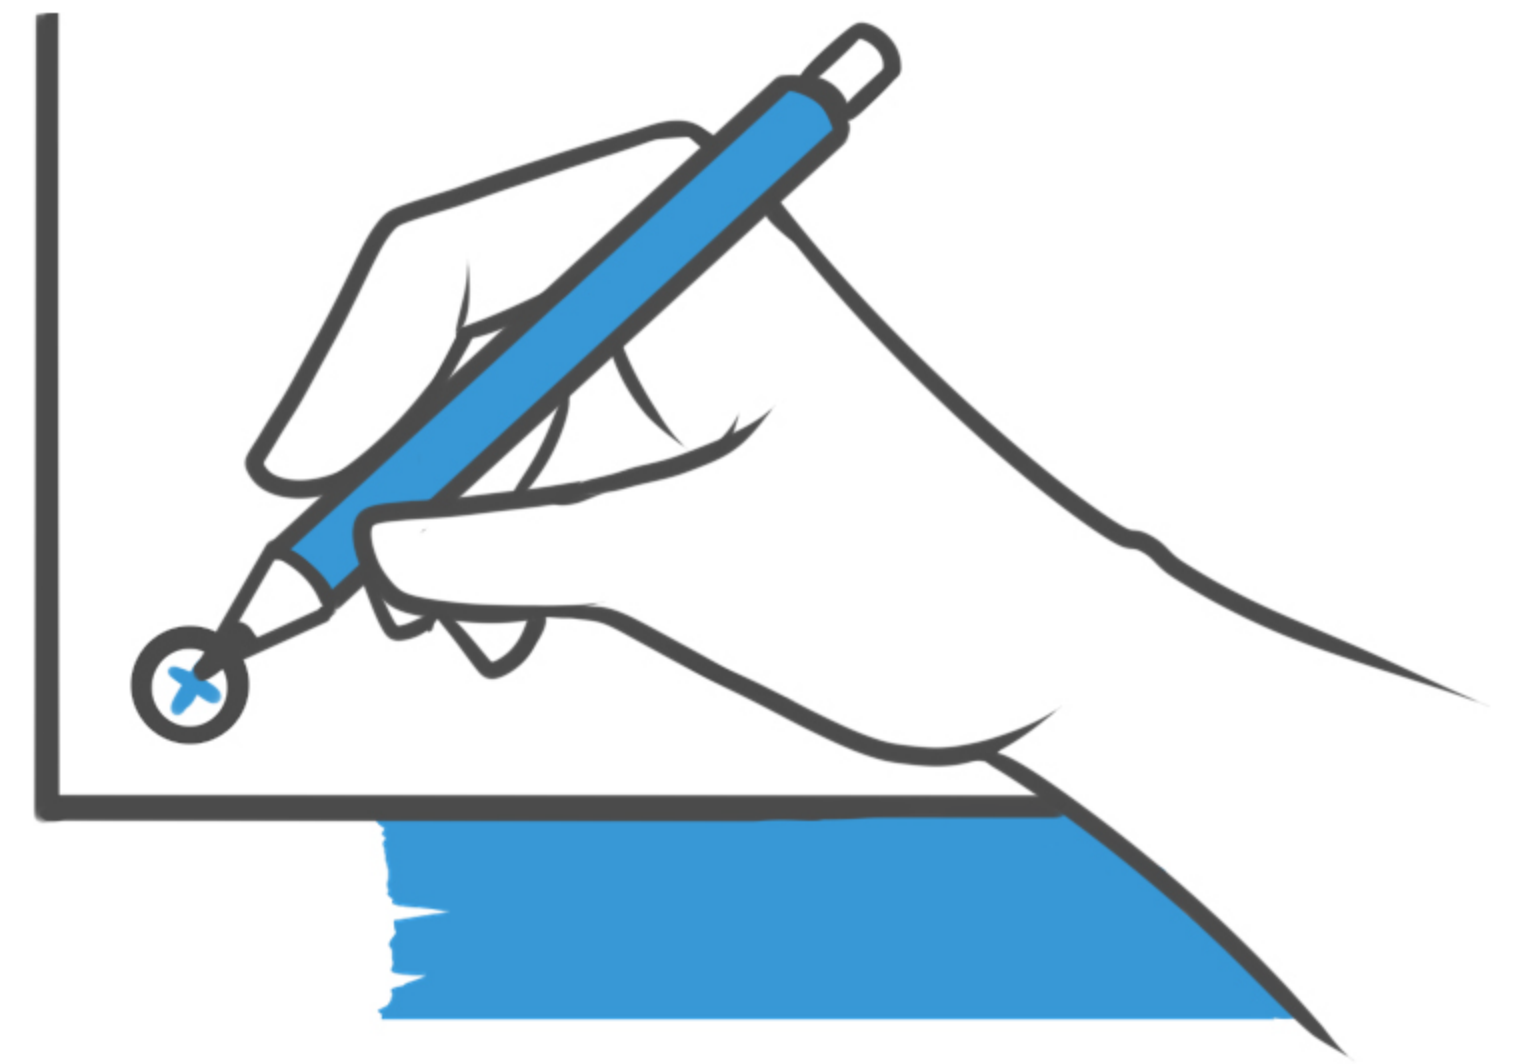


Use a pencil to mark the center of each of the four holes. Afterwards, carefully place the metal print away to avoid damaging the print while installing the standoffs.

6

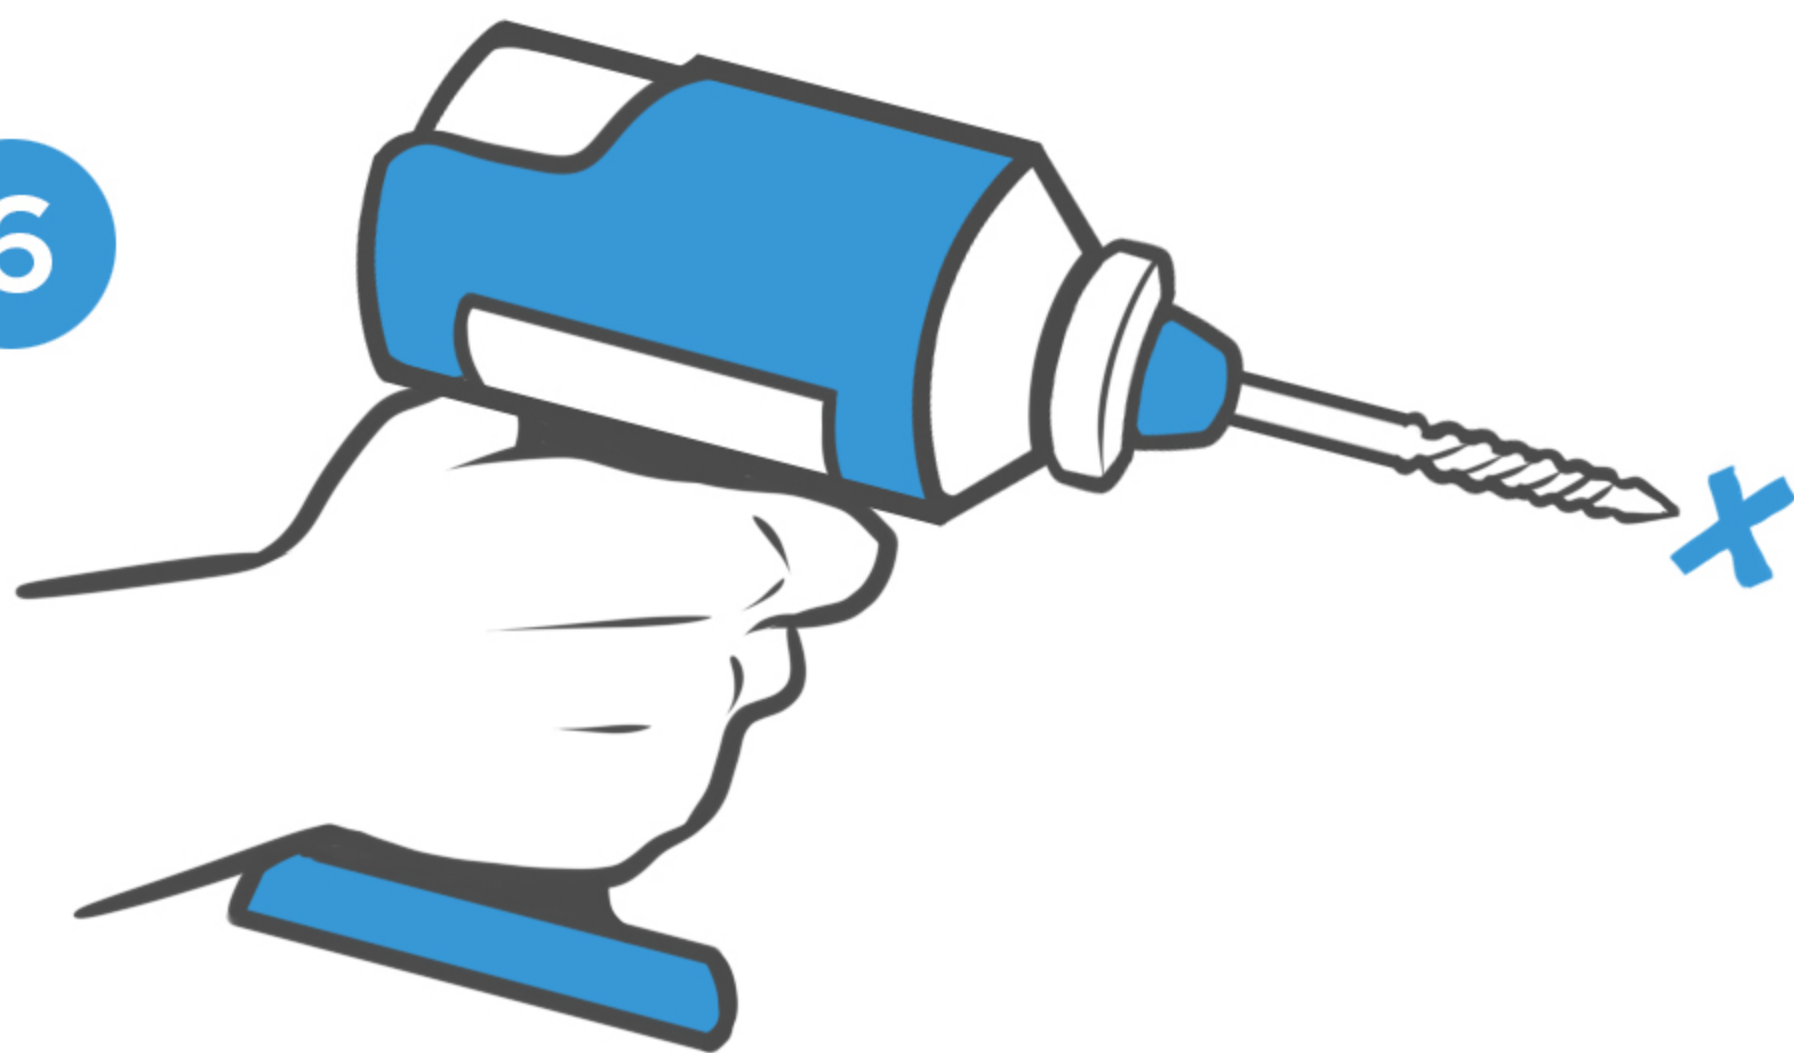


Use a cordless drill with the 1/4 drill bit on the center of each hole.

7

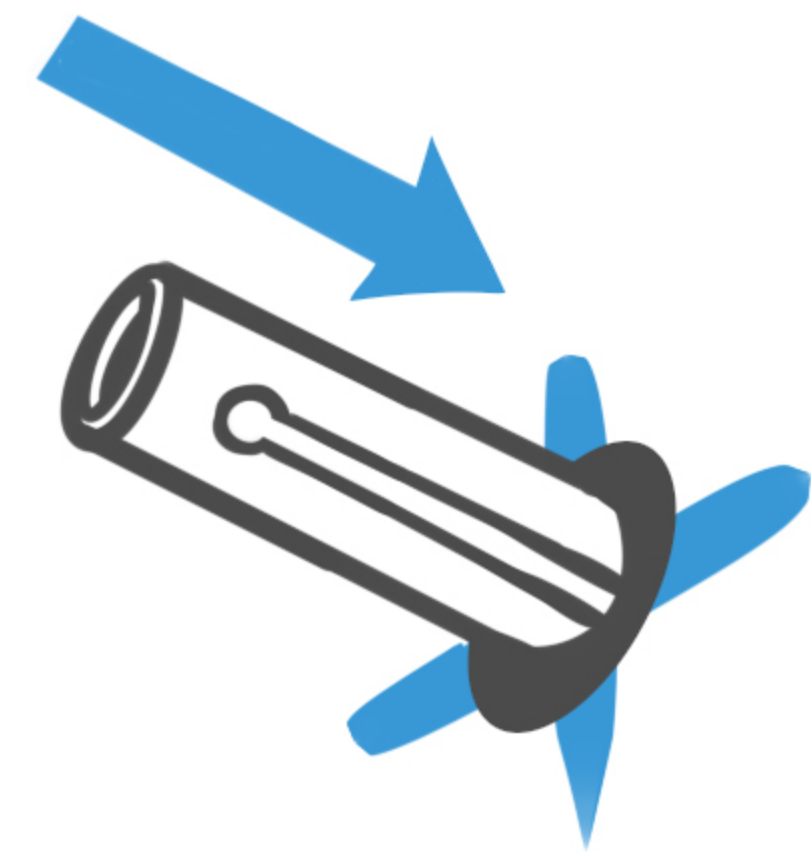


Insert drywall anchor.

8

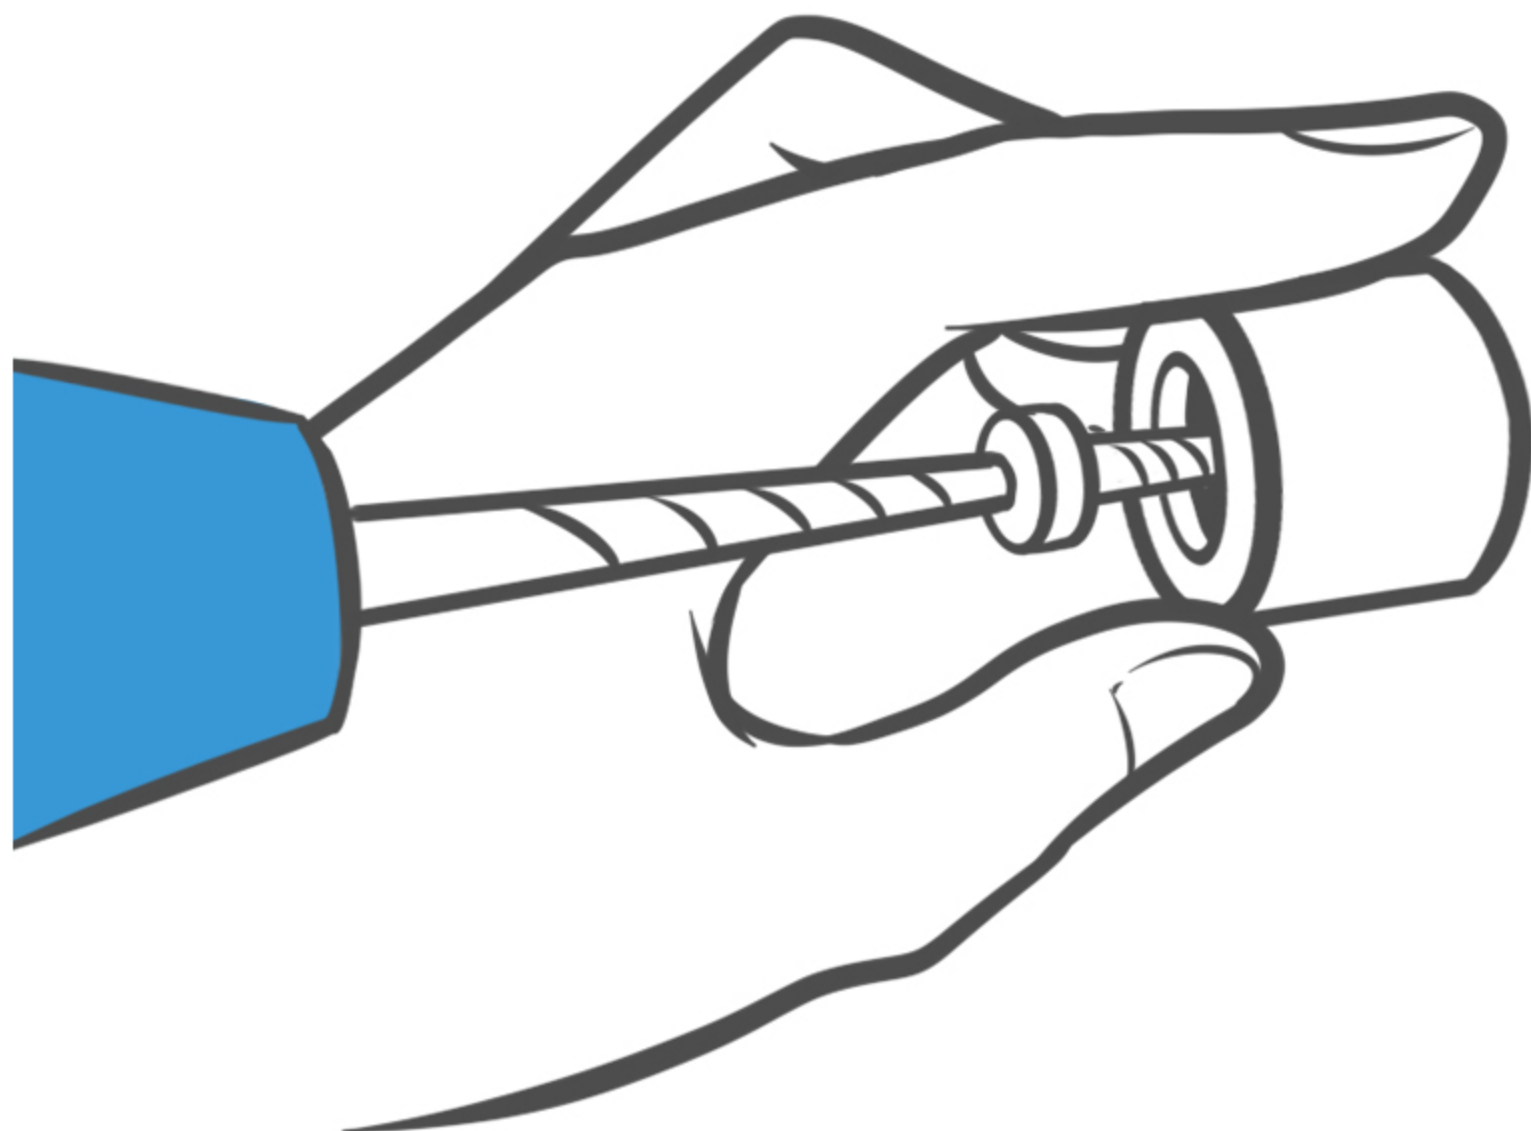

Using a screwdriver or cordless drill with Phillips bit, install the base of the metal standoff onto the wall with the provided screws.

9

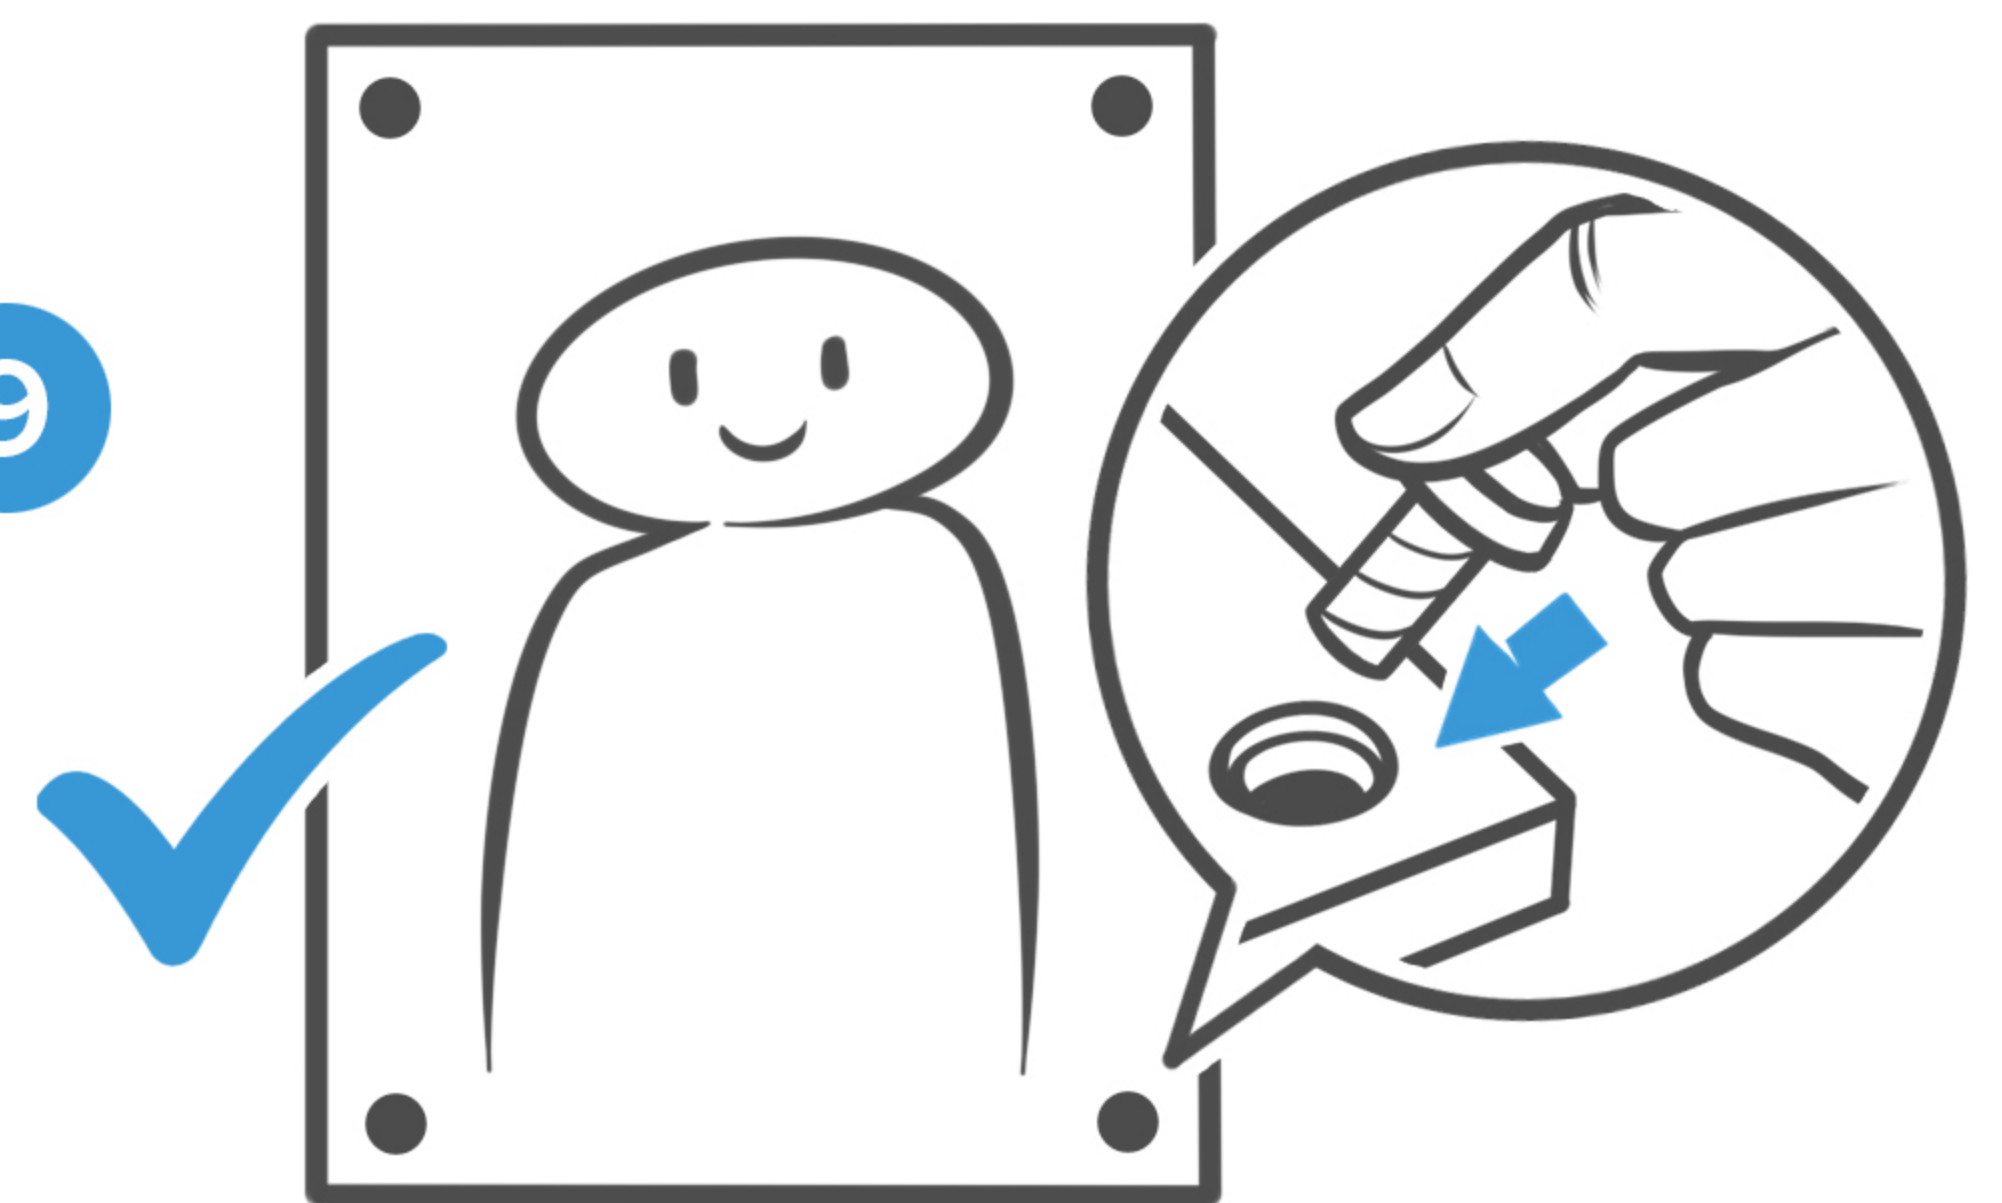

After the four standoff bases are installed, remove the tape and line up the metal print with the holes then screw in the standoff caps.

Tips: If there is a wood stud behind where you are screwing, the drywall anchors are not required. Be careful not to drop the metal print. The edges are delicate and will be damaged by the fall.